 


SRIPACK 3000

## **PROTECTION** BY EXCELLENCE





Be sure to set the network pressure: minimum 0.5 bar and maximum 3 bar. If the pressure is lower or higher, you need to use a system such as a booster to bring it up to the right pressure.


You can buy the Ripack3000 already adapted for natural gas or purchase an adaptation kit below.

## NATURAL GAS KIT

С

2

| Code  | Pressure                    |
|-------|-----------------------------|
| 40092 | From 0,5 to 0,8 bar (50 kW) |
| 40093 | From 0,8 to 1,0 bar (50 kW) |
| 40094 | From 1,1 to 1,4 bar (50 kW) |
| 40095 | From 1,5 to 2,0 bar (50 kW) |
| 40096 | From 2,1 to 2,5 bar (50 kW) |
| 40097 | From 2,6 to 3,0 bar (55 kW) |
|       |                             |

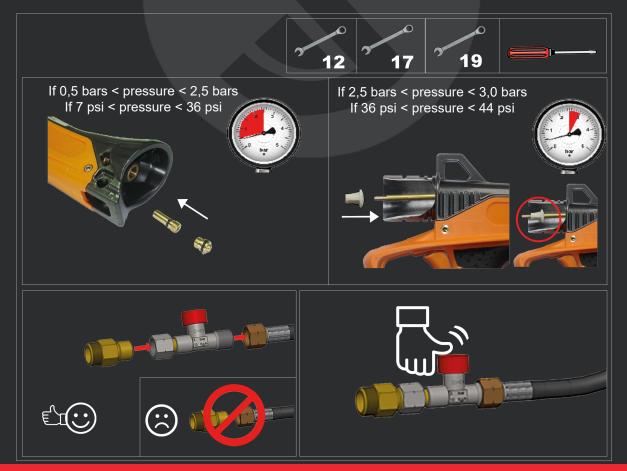



All information and photos in this brochure refer to product specifications updated at the time of publication according to the date mentioned on this page. RIPACK® reserves the right to change the colors, materials, features and specifications of its products at any time. Some products may be shown with accessories and/or features not available in some countries. All rights reserved. Reproduction in any form and by any means is prohibited without previous authorization from RIPACK®. \* guarantee for labor and parts; www.ripack.com

