



GRUPE SEFMAT







# RIPACK®

NOTICE DE MONTAGE  
ASSEMBLY INSTRUCTIONS

## 932 +



**NON FOURNI  
NOT SUPPLIED**



- 4 
- 5 
- 8 
- 10  x2
- 13 
- 19 



## LA PROTECTION PAR EXCELLENCE

ENREGISTREZ VOTRE PRODUIT  
CONTRAT DE GARANTIE EN LIGNE



[RIPACK.COM/ENREGISTRER-UN-PRODUIT](http://RIPACK.COM/ENREGISTRER-UN-PRODUIT)



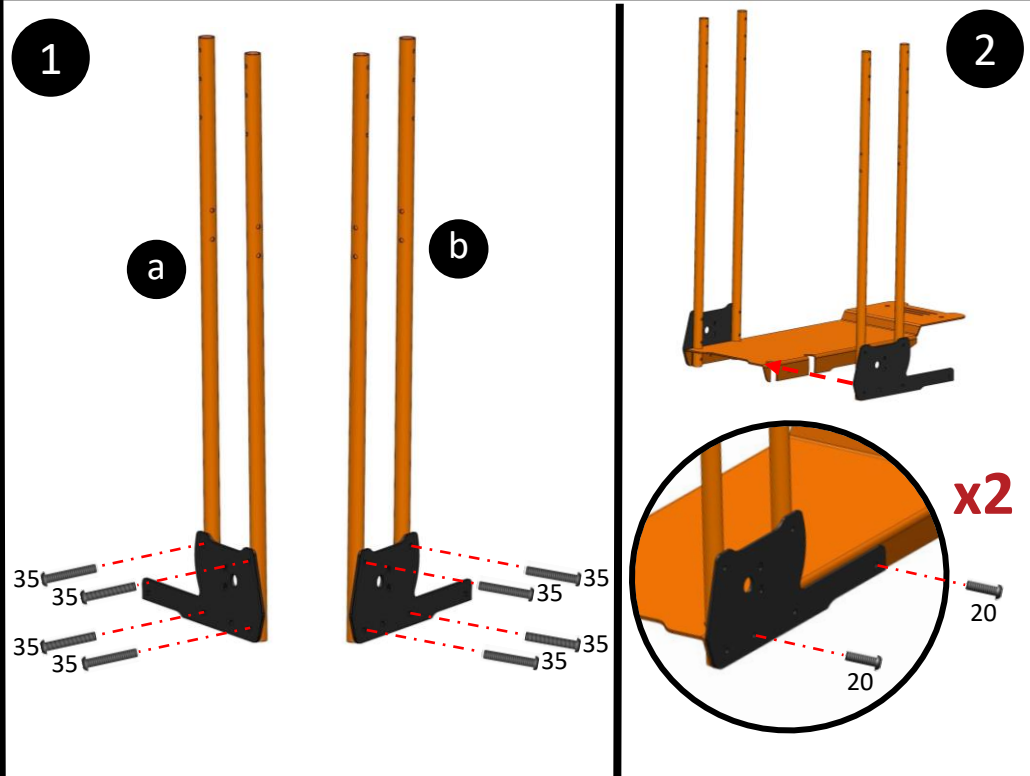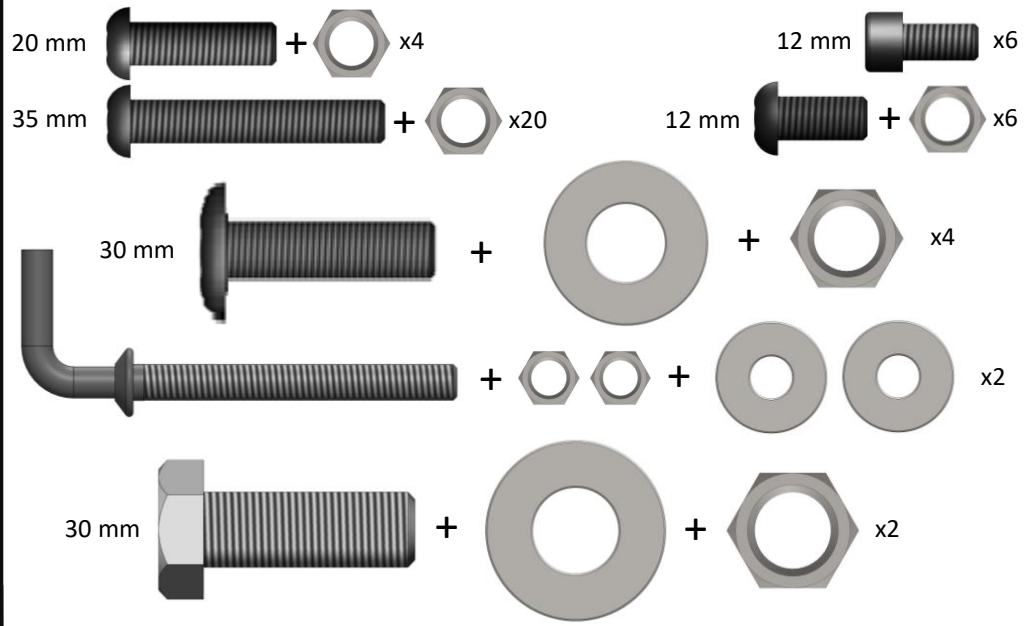


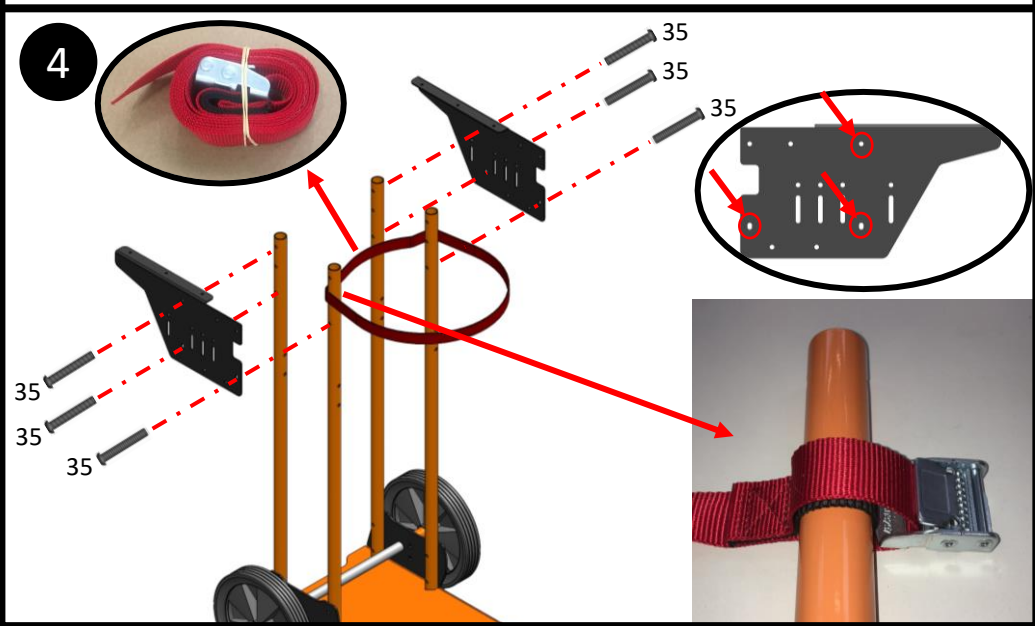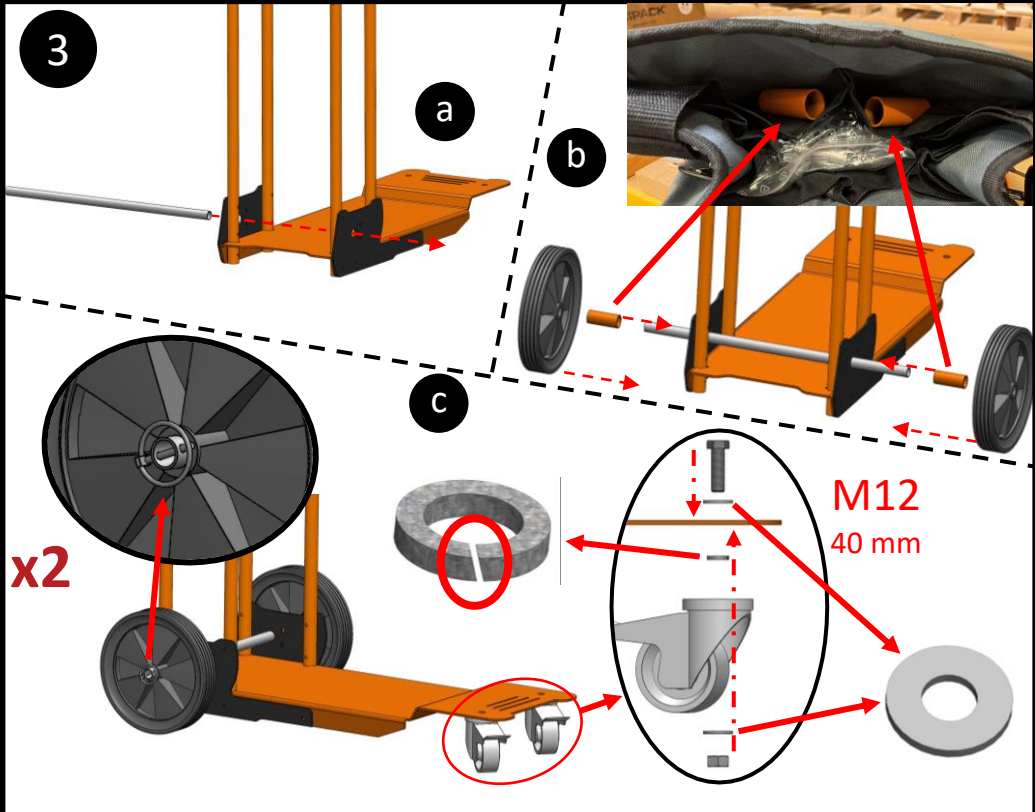



5

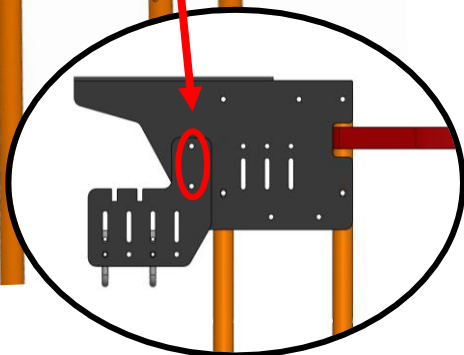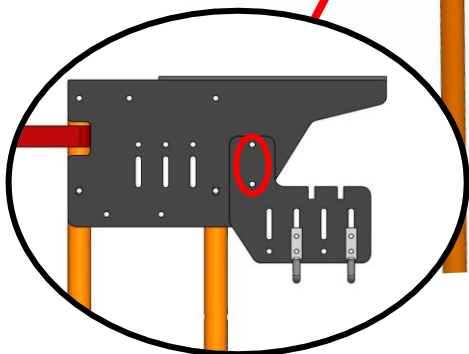


6

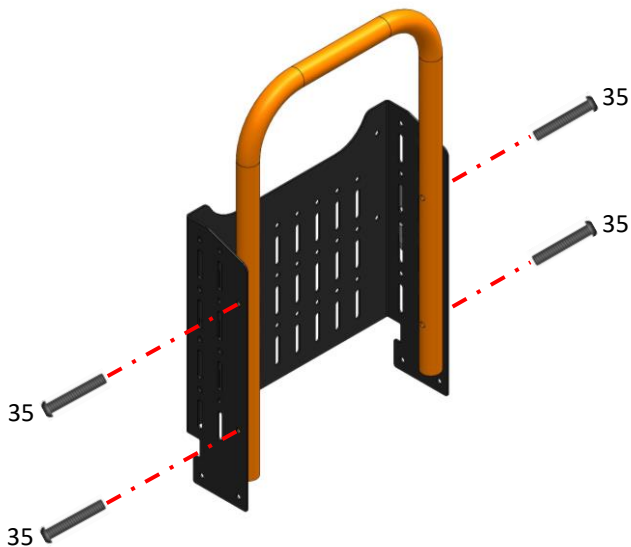

7

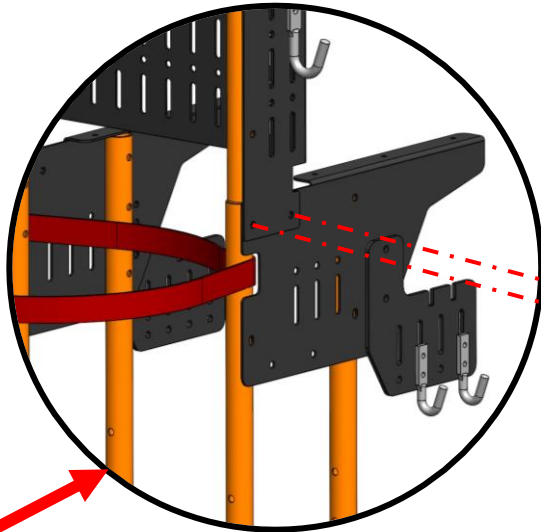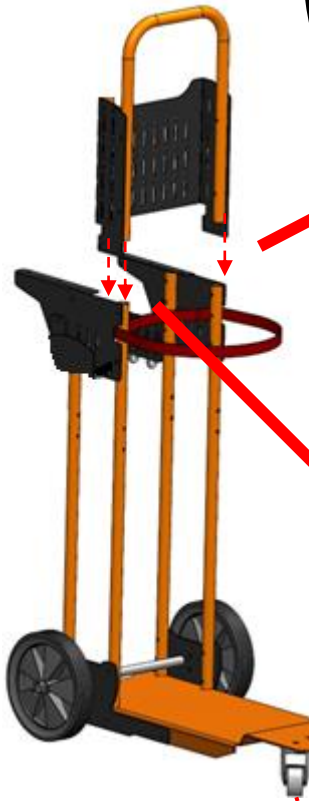

12  
35

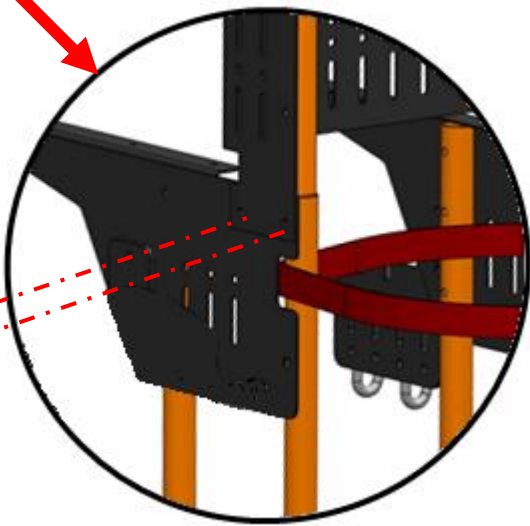



12  
35

8




x6




10

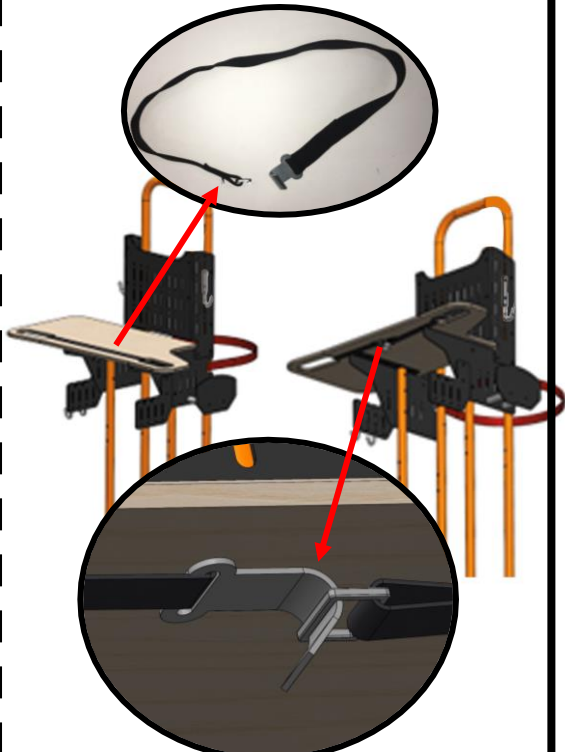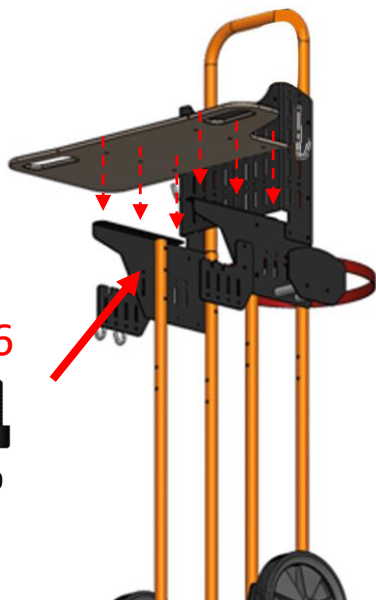

9

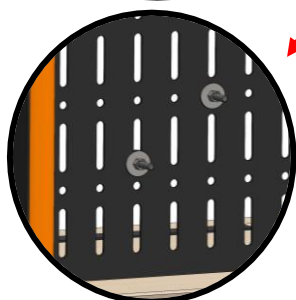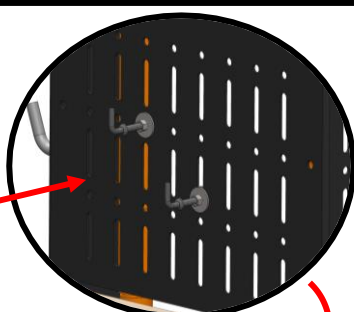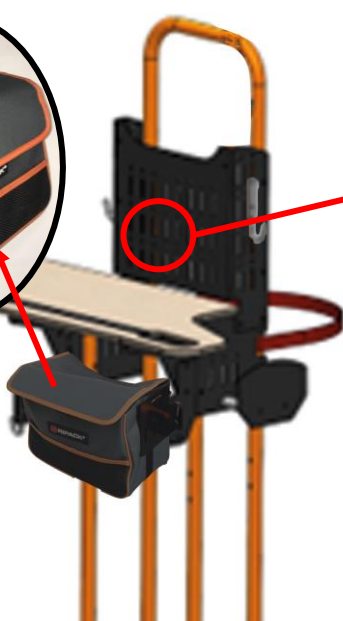

10

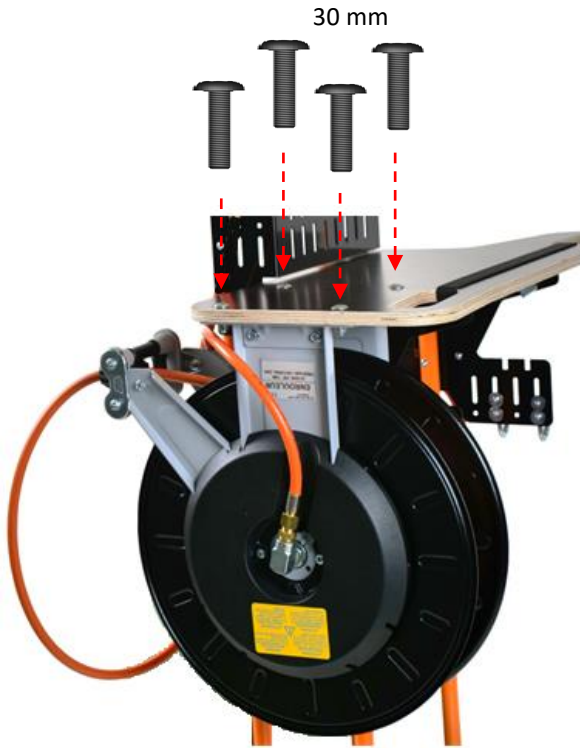

Veillez-vous référer aux réglementations applicables dans le pays d'utilisation concernant la conformité et l'emploi des produits et accessoires proposés dans notre gamme Ripack<sup>®</sup>. L'utilisation des accessoires, connexions et pièces détachées Ripack<sup>®</sup> sont indispensables au bon fonctionnement et garantie de nos produits ainsi à la sécurité des biens et personnes.

Avant le premier raccordement, les tuyaux doivent être nettoyés par soufflage. Pour le soufflage, il convient d'utiliser de l'air ou de l'azote. Si de l'azote est utilisé, il doit être évacué sans risque vers l'extérieur.

Please refer to the regulations applicable in the country of use concerning the conformity and use of the products and accessories offered in our Ripack<sup>®</sup> range. The use of Ripack<sup>®</sup> accessories, connections and spare parts is essential for the correct operation and guarantee of our products and for the safety of people and property.

Before the first connection, the hoses must be cleaned by blowing. Air or nitrogen should be used for blowing. If nitrogen is used, it must be vented safely to the outside.

