



MULTICOVER 955

ASSEMBLY INSTRUCTIONS

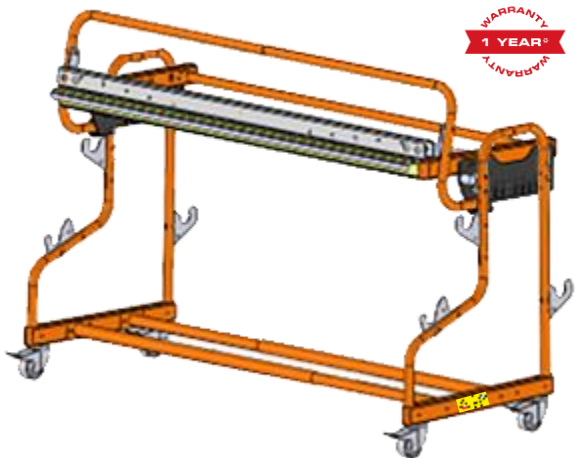



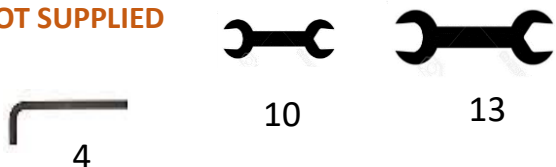

NOT SUPPLIED



YOUR PROTECTION
BY EXCELLENCE

REGISTER YOUR PRODUCT
ONLINE WARRANTY CONTRACT
RIPACK.COM/EN/REGISTER-A-PRODUCT





- M8 55 mm  x8  x28
- M8 45 mm  x20  x28
- M6 20 mm  x4
- M6 40 mm  x4




x1

x4


x8

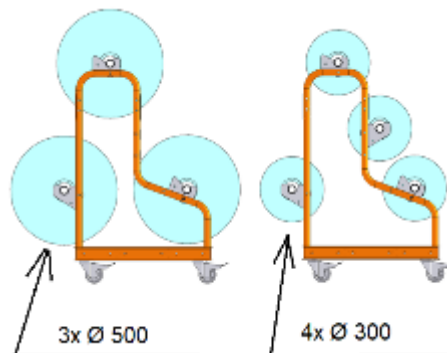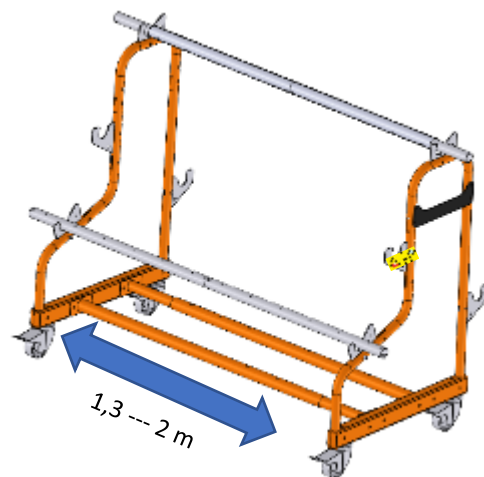


1

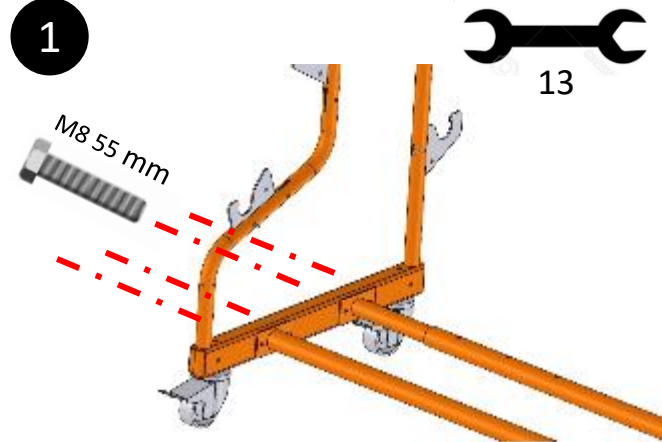

2

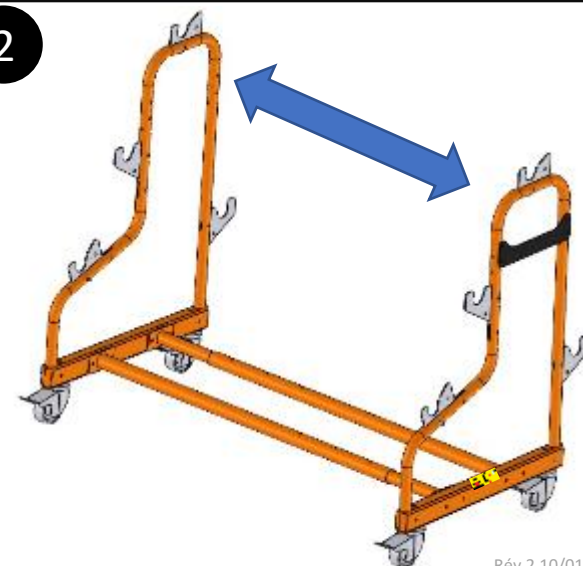


3

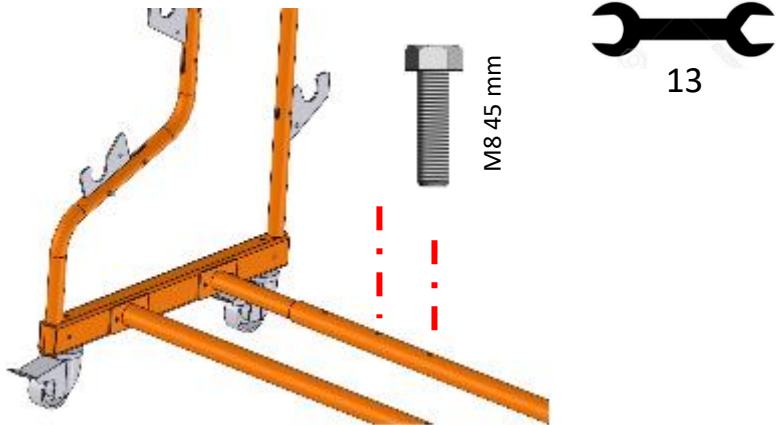


REEL SUPPORT ASSEMBLY INSTRUCTIONS


5

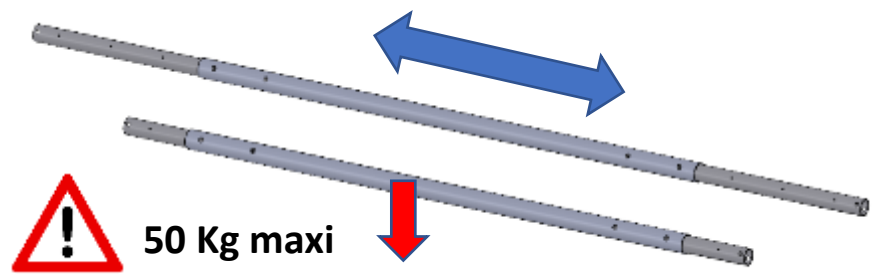

4

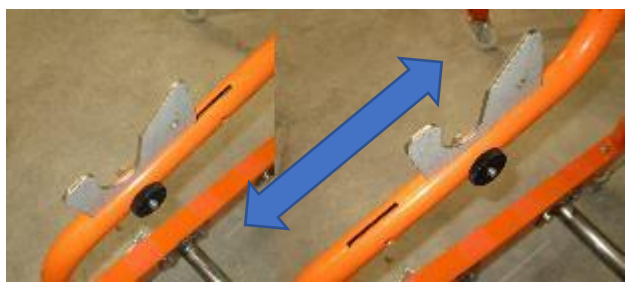

6


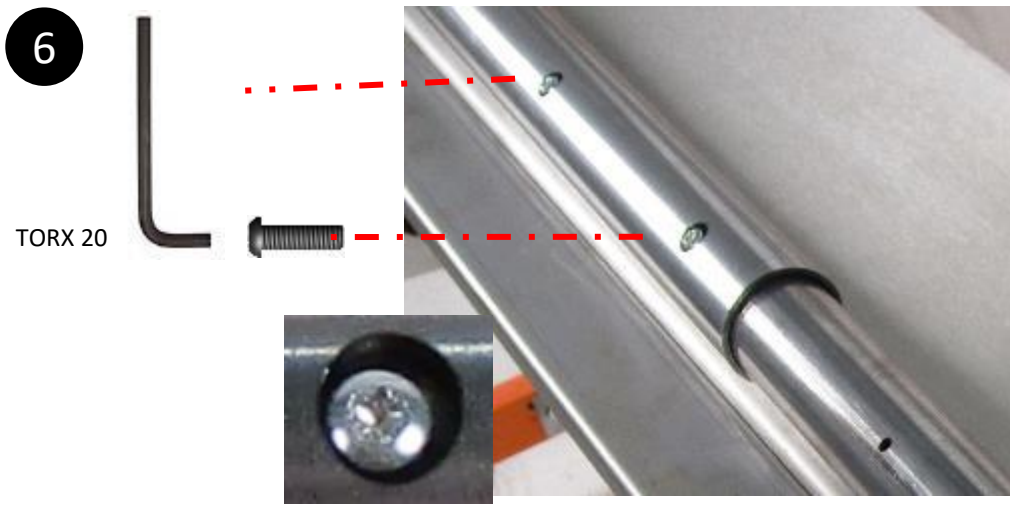


7






8

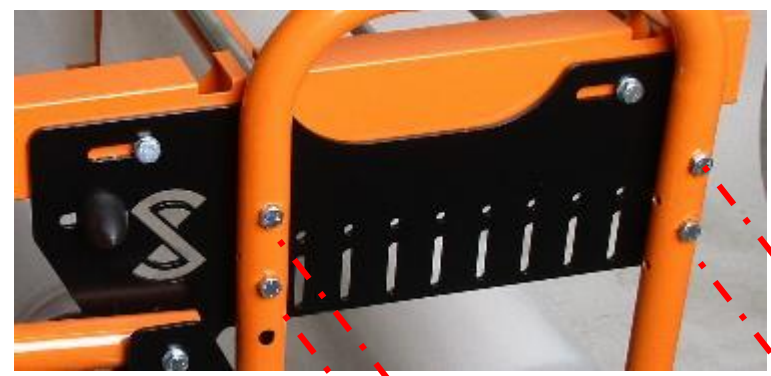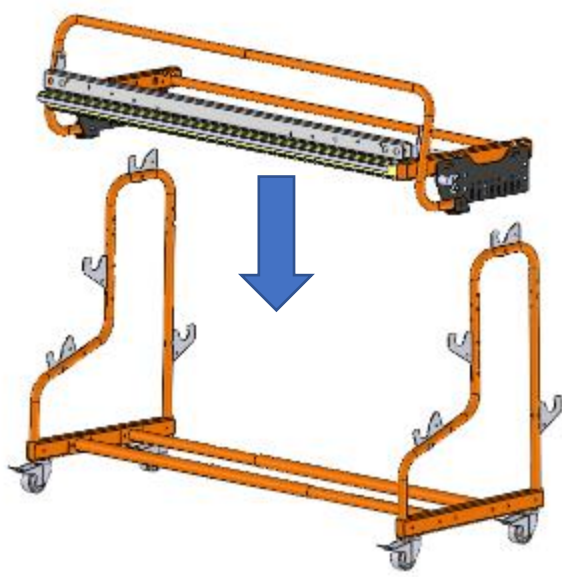

13



9



4




10





M6 40 mm


10

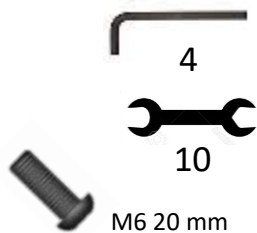



11

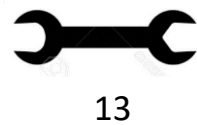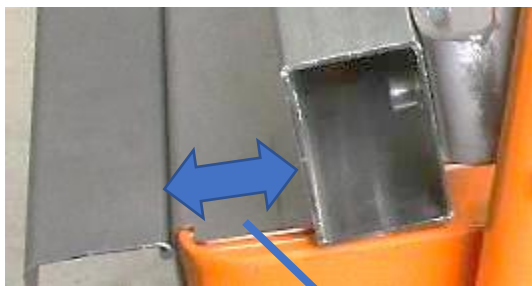


12

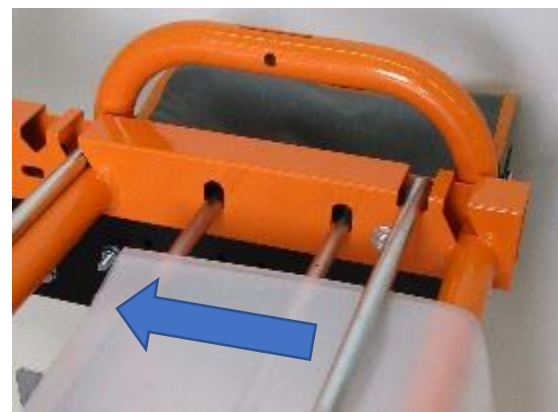

13

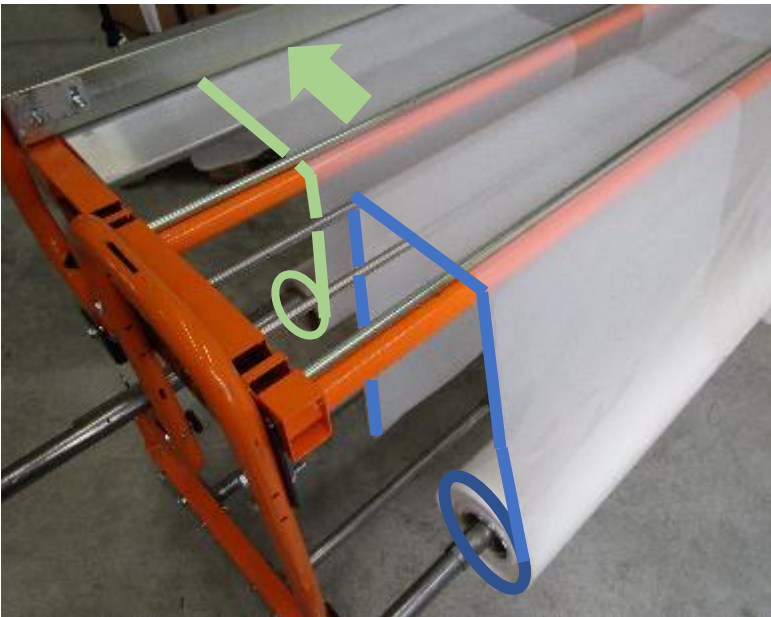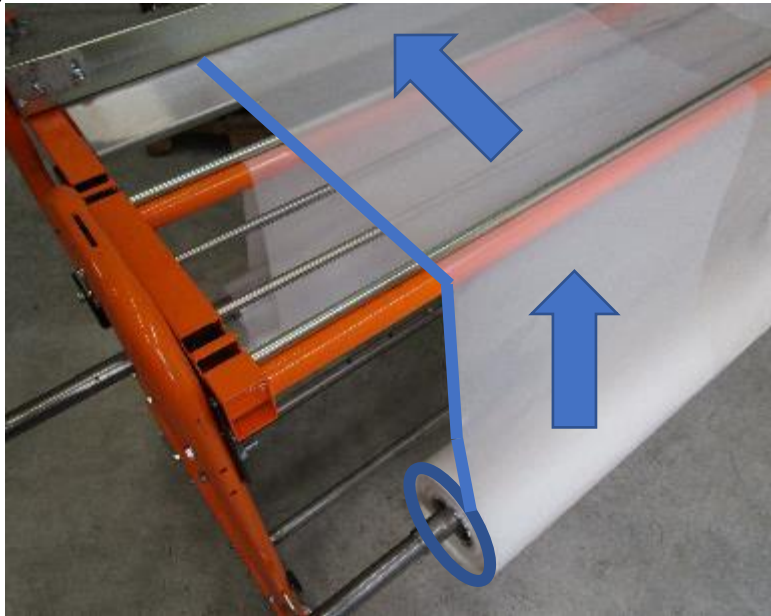

14

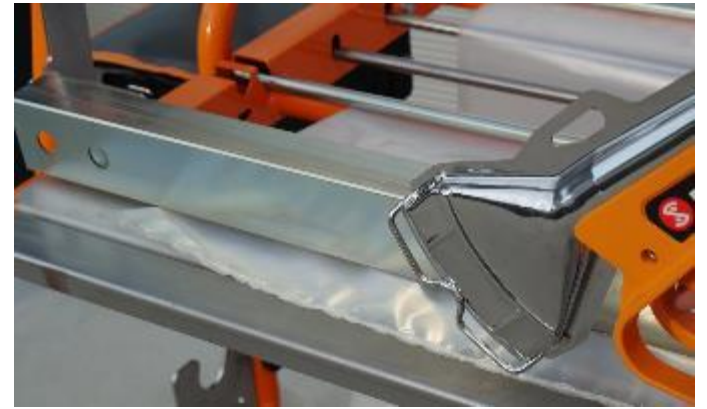


16



15

18

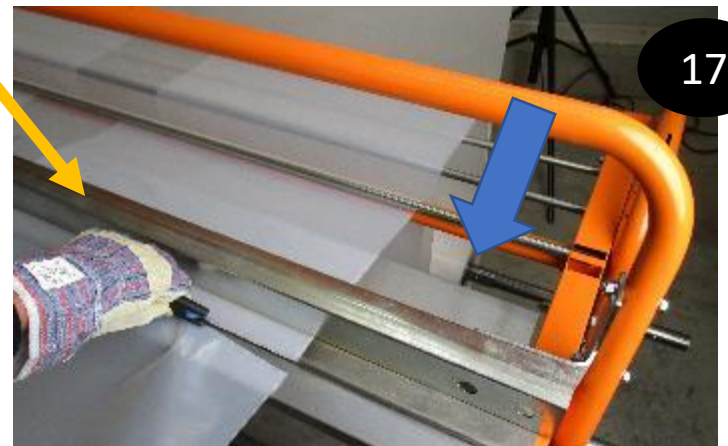

17